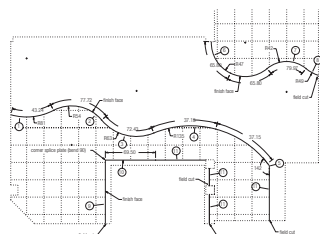
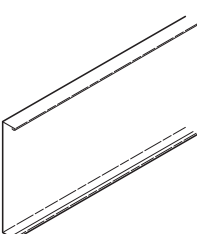
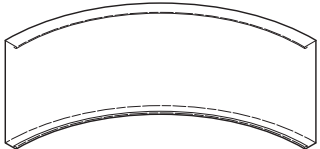
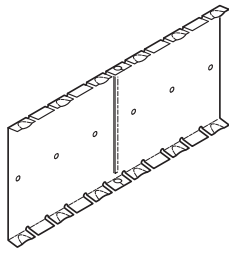
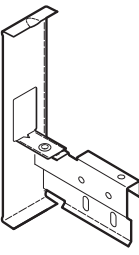
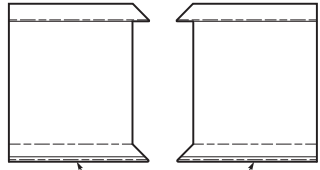
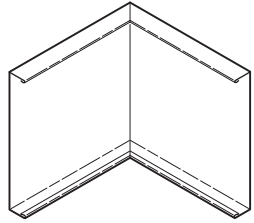
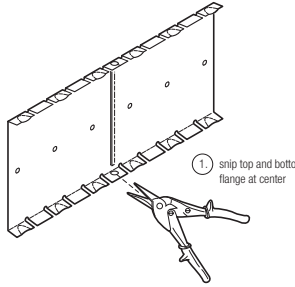
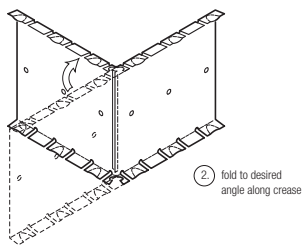
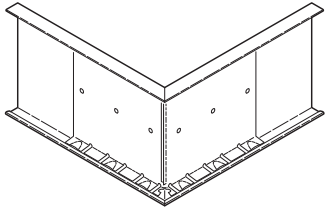



# Compasso™ Standard Suspension Trim System

Before beginning installation of the COMPASSO™ Standard Ceiling System, check the enclosed bill of materials to ensure that all parts are present and undamaged. Read all installation instructions first and familiarize yourself with the system's components. This is extremely important because *parts will become permanently damaged* if they are installed incorrectly! To help with identification, all parts are poly-bagged. This is to be used with IC464 General Installation Guide


<p><b>Parts and Components</b> May include some or all of the following</p>	 <p>Bill of Materials (BOM) and Reflected Ceiling Plan</p>	 <p>Suspension Trim—Straight (available in 2-1/4", 4", 6", 8", 10", 12" widths)</p>	 <p>Suspension Trim – Curved (available in 2-1/4", 4", 6", 8", 10", 12" widths)</p>
	 <p>4" Splice Plate and Temporary Splice Plates</p>	 <p>Attachment Clips</p>	 <p>Inside Corner Trim Pieces</p>
	 <p>90° Outside Corner (4" x 4") Outside corners are delivered with the system as one piece, mitered and formed.</p>		
<p><b>Splices</b></p>	<p><b>COMPASSO Temporary Splice</b> Temporary splices are used to keep the system together when marking and cutting the grid to the appropriate lengths. Temporary splices are made in the field by cutting permanent splice plates in half.</p>		<p><b>COMPASSO Permanent Splice</b> The permanent splice is 6" long and is used only after the grid is cut and attached to a COMPASSO section. Permanent splices are very difficult to remove once installed.</p>
<p><b>Inside Corner Splice Plate</b> Inside corners are assembled from two mitered sections of COMPASSO and one corner splice plate.</p>	 <p>1. snip top and bottom flange at center</p> <p>A. Snip splice.</p>	 <p>2. fold to desired angle along crease</p> <p>B. Fold splice at 90 degrees.</p>	 <p>C. Assemble inside corner.</p>

# Tip Sheet

## COMPASSO Standard Clip Installation

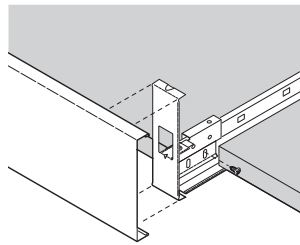

Install a COMPASSO clip on the end of each tee. First, slide the clip onto the top of the grid...

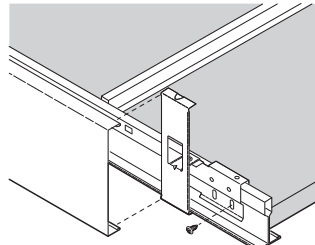

Clip installation where COMPASSO island has perimeter grid. Rotate clip 90 degrees and screw-attach to bulb of grid. Snap into COMPASSO Trim.

**Note:** If a grid attachment clip occurs at a splice, the system is designed to accommodate both the splice and the attachment clip at the same point.

### Technical Service

800.USG.4YOU

### Website

usg.com

### Samples/Literature

888.874.2450

### Samples/Literature E-mail

samplit@usg.com

### Samples/Literature/Fax

888.874.2348

### Customer Service

800.950.3839

#### Note

All products described here may not be available in all geographic markets and are subject to change without notice. Consult your local sales office or representative for information.

#### Trademarks

The following are trademarks of USG Interiors, Inc. or a related company: COMPASSO, USG, USG in stylized letters.

#### Notice

We shall not be liable for incidental or consequential damages, directly or indirectly sustained, nor for any loss caused by application of these goods not in accordance with current printed instruction or for other than intended use. Our liability is expressly limited to replacement of defective goods. Any claim shall be deemed waived unless made in writing to us within thirty (30) days from the date it was or reasonably should have been discovered.

#### Safety First!

Follow good safety/industrial hygiene practices during installation. Wear appropriate personal protective equipment. Read MSDS and literature before specification and installation.



Manufactured by USG Interiors, Inc.  
550 West Adams Street  
Chicago, IL 60661

IC588/4-11  
© 2011, USG Interiors, Inc.  
Printed in U.S.A.